
PLATINUM®
SUN & SHADE


Assembly instructions


ADAPTOR

The adaptor plate is for free-arm parasols which do not fit directly on parasol bases. Free-arm parasols with exactly a hole spacing of 7.6/9.55/11.3 can be placed directly on Platinum Sun & Shade bases (without the adaptor).

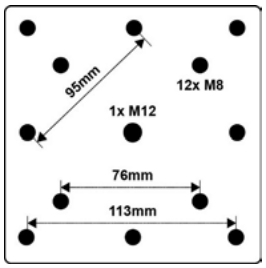

Adaptor for Platinum In-ground bases
The adaptor can be used on the in-ground bases for different hole distances between a minimum of 6.4 and a maximum of 11.3 cm.


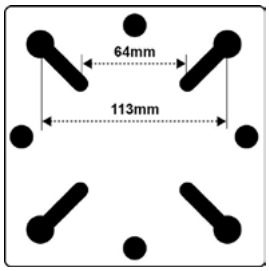


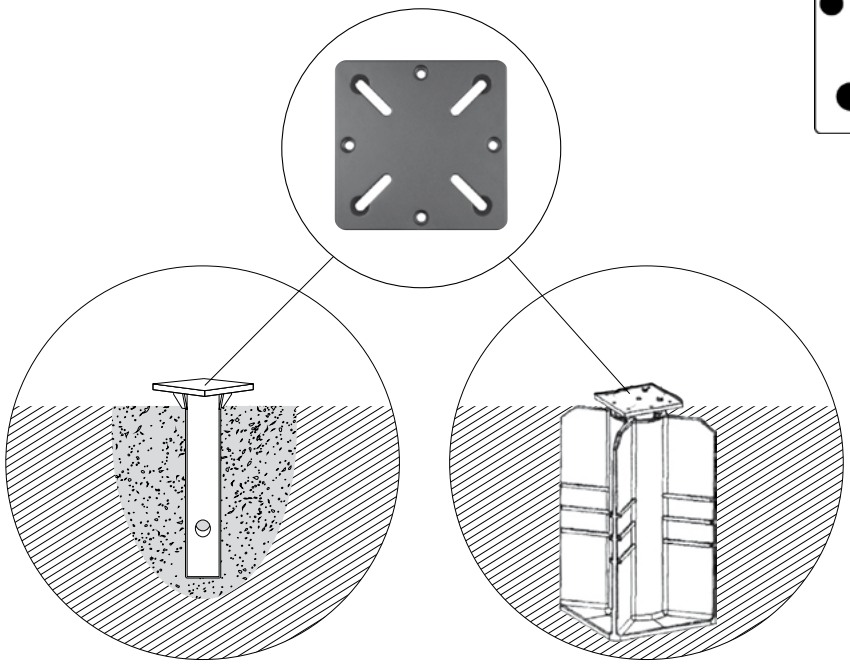

6906 In-ground Base Concrete
(not included)

6900 In-ground Base
(not included)

Parts list

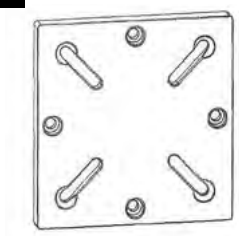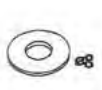
A 1x	**B** 1x	**C** 4x	**D** 4x	**E** 4x	**F** 4x
		 Not included, these are supplied with the parasol			

⚠ Important. Follow the assembly instructions carefully.


PLATINUM®
SUN & SHADE

Assembly instructions

ADAPTOR

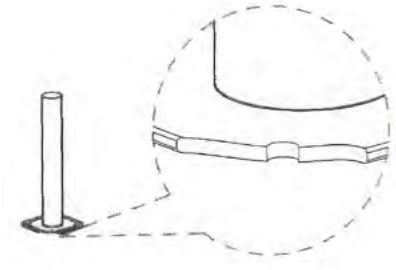



Your parasol base does not have threading, follow option A

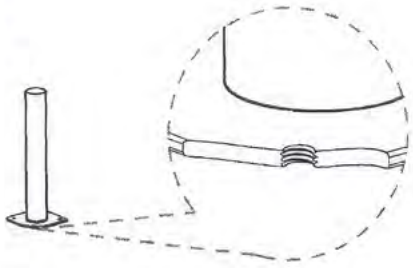


Your parasol base has threading, follow option B


A

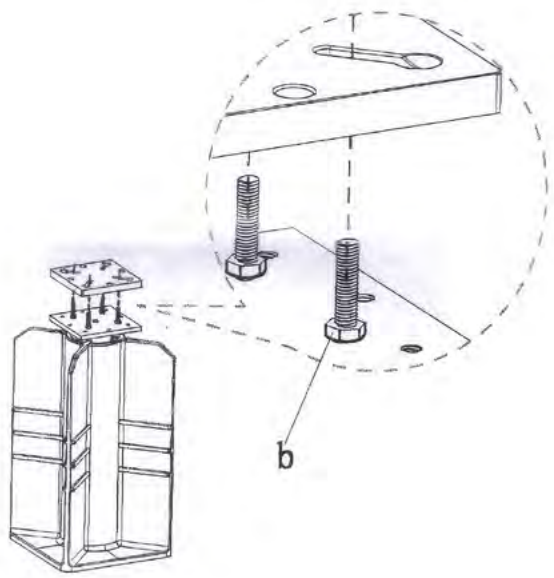

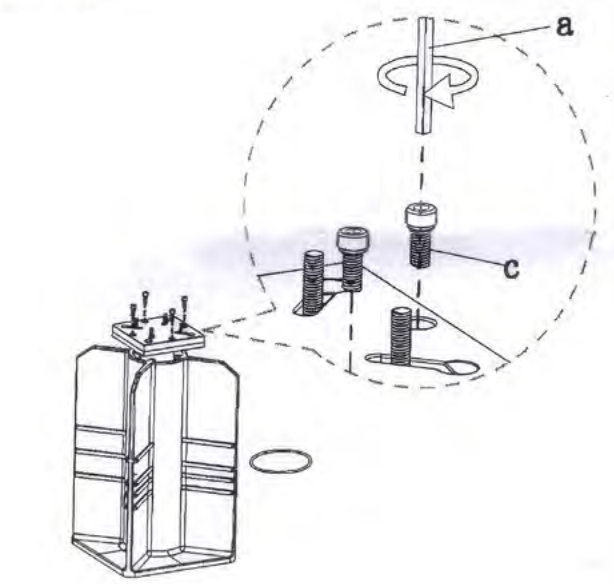

STEP 1

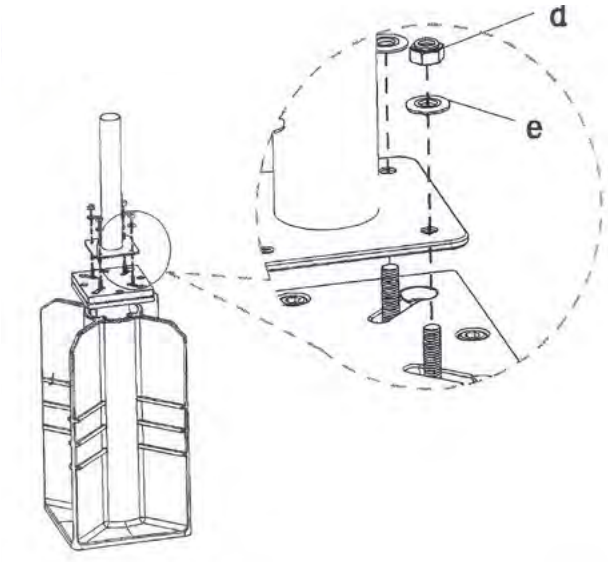

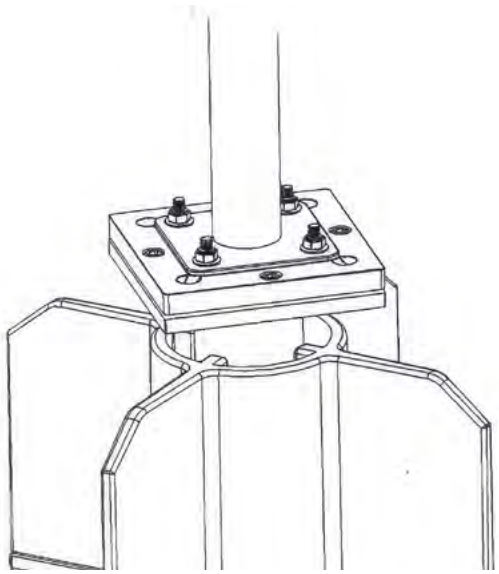

STEP 2


⚠ Important. Follow the assembly instructions carefully.

PLATINUM®
SUN & SHADE


Assembly instructions

ADAPTOR

B

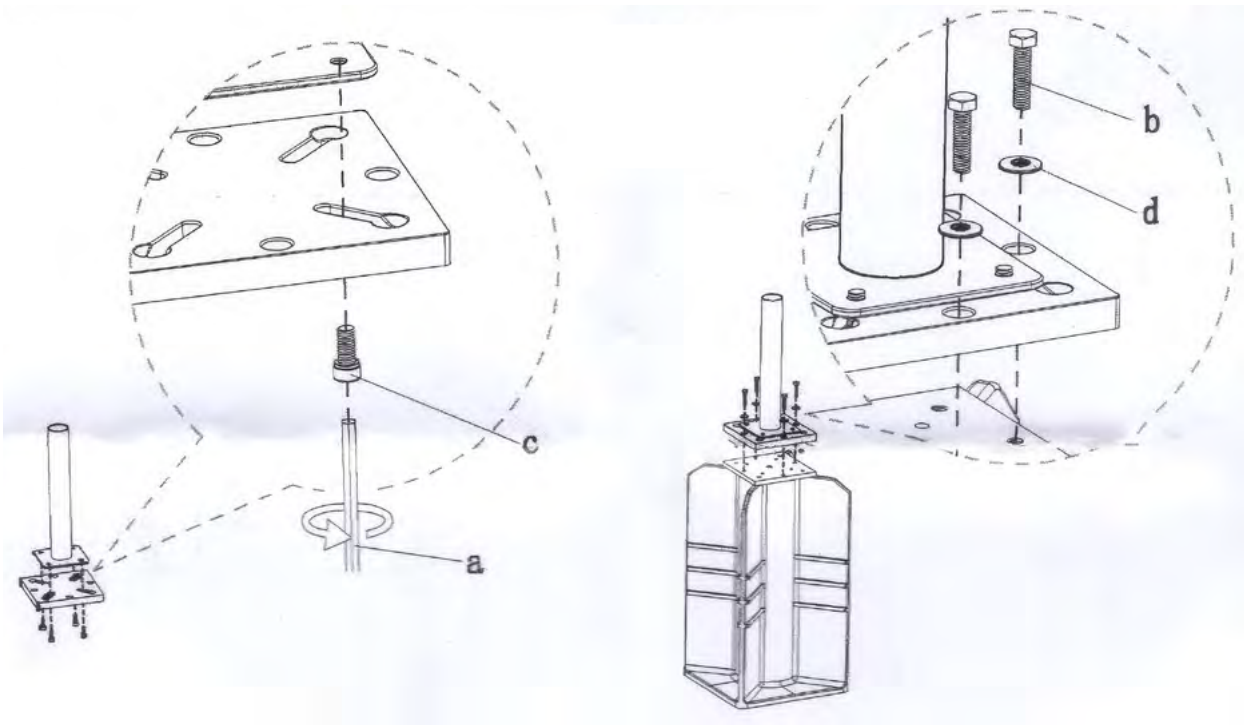

STEP 1

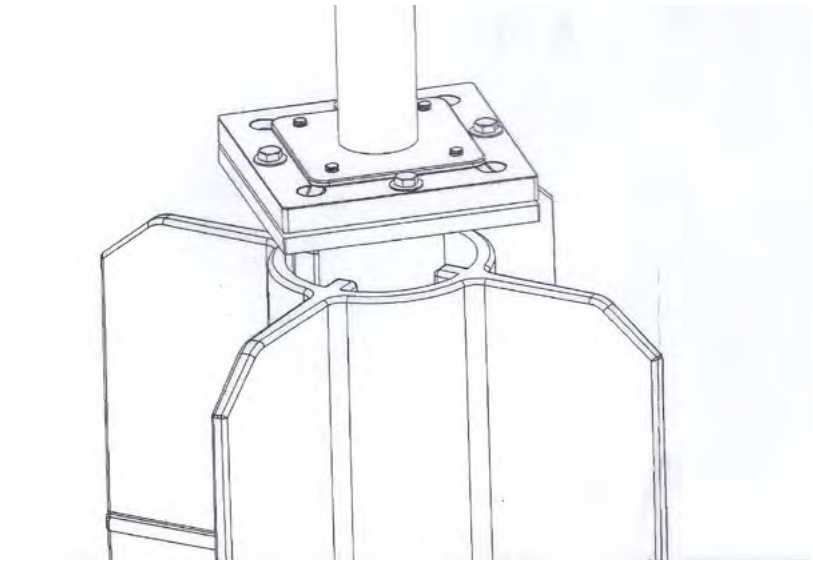

STEP 2

Adaptor for Platium granite and ceramica bases
If desired the adaptor can also be used on our granite bases and ceramica bases with extra long countersunk screws. E-mail service@platinum.nl and ask for art. 6910 (4x M8x80). The adaptor plate can then be used for different hole distances between 6.4 and 9.8 cm.

